Set up the CNCR Non-Contact Radar Level Sensor

SCAN ME

Download the app:

Scan this QR code and then download either the App Store or Google Play version of the Wireless Device Configurator app suited to your phone.
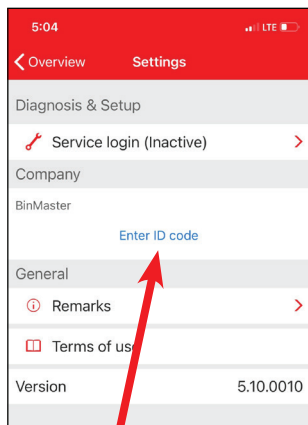
Here are the URLs if the QR codes are uncooperative.

https://apps.apple.com/us/app/wireless-device-configurator/id1531831585

https://play.google.com/store/apps/details?id=com.vega.wireless.device.configurator&hl=en_US&gl=US
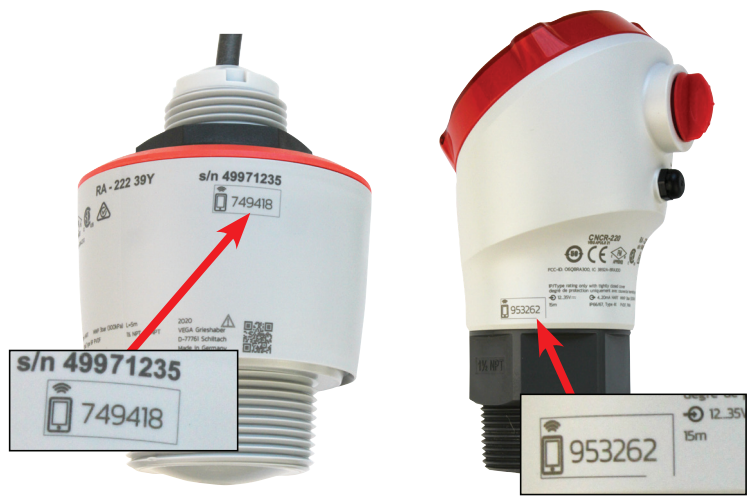

When setting up each sensor, you need to enter the sensor's Bluetooth Access Code to activate it.

To enable Bluetooth software enter company ID code:

5:04	.ıl LTE 🔋
‹ Overview	**Settings**
Diagnosis & Setup	
🔧 Service login (Inactive)	›
Company	
BinMaster	
Enter ID code	
General	
ⓘ Remarks	›
📖 Terms of us	
Version	5.10.0010

BMYQXZ

Where to find the Access Code on the unit:

s/n 49971235
749418

953262

SCAN ME

Download the manual:

Scan this QR code to visit the CNCR Manual web page.

Then select the manual appropriate to the CNCR sensor you are installing.

Here is the URL if the QR code is uncooperative.

https://www.binmaster.com/products/product/cncr-manuals

BINMASTER®

For assistance call 1-800-278-4241 or 402-434-9102.