


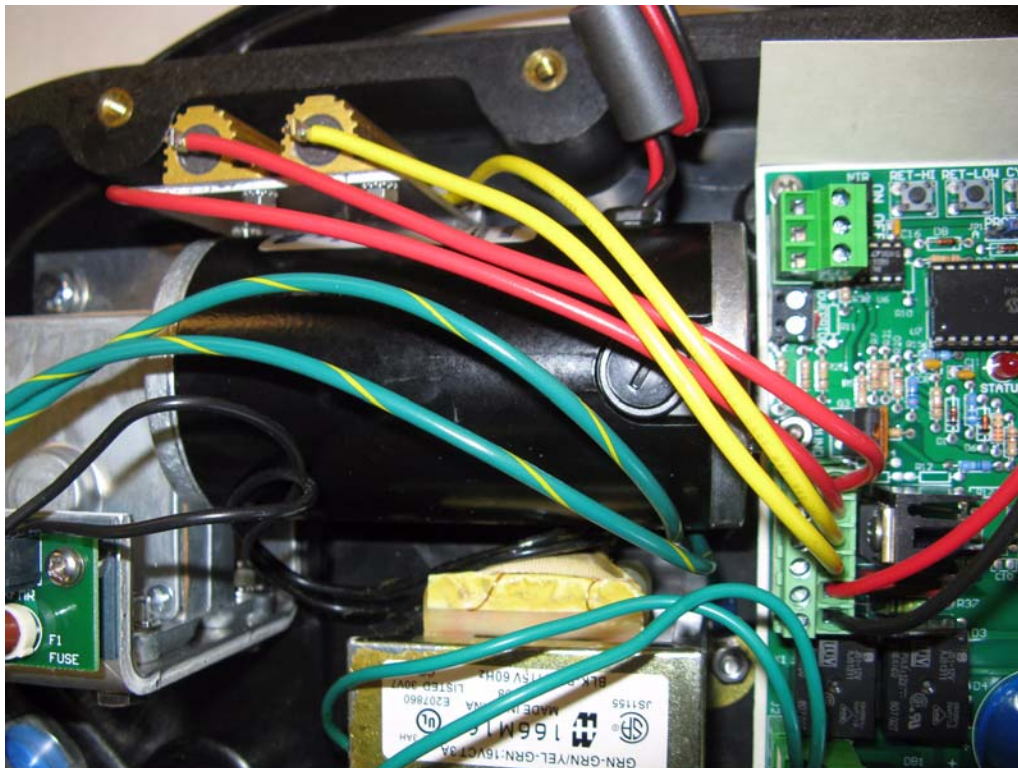

5 OHM Resistor Replacement Kit Instructions

1. Disconnect wires and remove existing 4 OHM resistor assemblies and bracket from enclosure.
2. Attach 5 OHM resistor assemblies and bracket to enclosure.
3. Attach wires to terminal strip making special attention to the location of wires on terminal strip. The 2 red wire on the top of the terminal strip and the 2 yellow wires in the middle. See photo below.
4. Tighten terminal screws to secure wires.



9270284.fm

Division of Garner Industries
7201 N. 98th St. P.O. Box 29709
Lincoln, NE 68057 Lincoln, NE 68529
(402) 434-9102 Fax: (402) 434-9133
www.binmaster.com Email: info@binmaster.com