



**MAXIMA+ Series
ROTARY LEVEL CONTROL**



**OPERATING INSTRUCTIONS
PLEASE READ CAREFULLY**



Division of Garner Industries
7201 North 98th Street
Lincoln, NE 68507-9741
(402) 434-9102

TABLE OF CONTENTS

GENERAL SPECIFICATIONS	3
SAFETY SUMMARY	4
1.0 INTRODUCTION.....	5
2.0 INSTALLATION	5
2.1 Location and Mounting	5
2.2 Input Power and Field Wiring	6
2.3 Grounding.....	7
3.0 RELAYS	7
3.1 DPDT Relay	7
3.2 Fail-Safe High.....	7
3.3 Fail-Safe Low	8
3.4 STATUS Relay.....	8
4.0 TIME DELAY	9
4.1 Changing Time Delay.....	9
5.0 EXTERNAL LED	10
6.0 WARRANTY AND CUSTOMER SERVICE	10
7.0 DISPOSAL	11
8.0 REPAIR.....	11
DECLARATION OF CONFORMITY.....	12

MAXIMA+ GENERAL SPECIFICATIONS

Supply:	AC MODEL DC MODELS	24/115/230 VAC 50/60 Hz (selectable) 12 VDC to 24 VDC
Supply Tolerance:		-15% +10%
 Load:		AC Model = 8 VA; DC Models = 4 VA
 External Overcurrent Protection:		10A Max
Ambient Temperature: (Electronics)		-40° F to +158° F (-40° C to +70° C)
ATEX:		-4° F to +185° F (-20° C to +85° C)
Enclosure:		Type 4X, 5, & 12 ; IP66 Die cast Aluminum with 6% magnesium max. USDA approved powder coat finish
Pressure:		5 PSI above ambient
Altitude:		Up to 2000 m
Hazardous Location Rating:		CSA / C-USA Class II Group E, F, & G ATEX Suitable for: II 1/2D c Ex tb IIIC T138°C Db (Ta = -20°C to +85°C)
DPDT Relay Output:		10 Amps 250 VAC
Fail-Safe:		Switch selectable "High" or "Low" level modes.
Status Indicator Relay:		SPDT = 10A 250 VAC (optional) DC Solid State Relay = 1 A 42 VDC (optional) AC Solid State Relay = 1 A 250 VAC
Time Delay:		Selectable 5 seconds (default); programmable to 25 seconds
Mounting:		1 1/4 inch NPT thread
 Conduit Entries:		3/4 inch NPT thread NOTE: For hazardous locations an appropriate conduit seal off as per the installation class or zone is required within 18" of the enclosure
 Shaft Seal:		1/2 micron, 30 PSI NOTE: The fluorocarbon seal is extremely durable and typical lifespan in normal operation is 8 to 10 years, but should be inspected every three years for wear and replaced as necessary. See Customer Service section for factory contact details.

SAFETY SUMMARY

Review the following safety precautions to avoid injury, prevent damage to the equipment and maintain protection methods for hazardous locations.

The product should be installed, commissioned, and maintained by qualified and authorized personnel only. Install according to installation instructions and comply with all national and local electrical codes.

If this product is used in a manner not specified by the manufacturer, the safety and hazardous location protection could be compromised.

Use electrical wire that is sized and rated for the maximum voltage and current of the application.

An external overcurrent protection device or switch must be included in the installation and rated for the voltage and current of the device and load. It should be installed near the equipment and identified as for that equipment. Do not install this product in a manner which makes it difficult to operate the disconnecting device.

Properly ground the enclosure to an adequate earth ground. Observe all switch contact ratings as called out on the nameplate and in the operating instructions. Insure that the enclosure cover is in place and secured tightly after installation.

Before servicing, disconnect power from all circuits entering enclosure before removing cover. After any inspection or servicing, insure the enclosure cover is in place and tightly secured.

In potentially wet environments thoroughly seal all conduit entries.

Safety Terms and Symbols



WARNING: Warning statements identify conditions or practices that could result in injury or loss of life and the *operating instructions must be consulted*. Risk of electrical shock.



CAUTION: Caution statements identify conditions or practices that could result in damage to this product or other property.

Safety Precaution



CAUTION: Before removing the enclosure cover, open all circuits entering the enclosure. Be aware that there may be more than one live circuit.

1.0 INTRODUCTION

The Bin-Master Maxima+ is a rotating paddle style level sensor which provides reliable point level detection for bulk solids, including powder, pellet, and granular materials. The unit's status is continually monitored, and its fail-safe circuitry will fall to a "safe" condition in the event of a unit failure or power failure. A visual LED continually indicates the sensor's status, giving a quick visual monitoring of paddle rotation, covered condition or fault condition. A Status relay is also provided for monitoring the status of the sensor.

The Maxima+ motor rotates the drive shaft and paddle at 1 RPM. When the vessel material fills to the level of the indicator paddle, the material causes the paddle to stop rotating indicating a covered condition. When the material falls away, the paddle starts rotating again to indicate an uncovered condition.


2.0 INSTALLATION

2.1 Location and Mounting

TOP MOUNT (For mounting plate options see figure 4 on page 6)

Figure 1


1. Locate and cut hole in top of bin to fit outside diameter of 1 1/4" pipe coupling (1.950").
2. Position coupling halfway into bin and weld.
3. Turn unit so conduit opening is in desired location.
4. Add 1/4" extension pipe to desired length with standard 1/4" coupling on bottom end.
5. Cut 1 1/4" support pipe approximately 4" shorter than overall length of 1/4" pipe shaft when used with flexible coupling.
6. Insert 1 1/4" pipe into coupling and tighten.
7. Insert paddle into 1/4" coupling and drill holes for lock pins.

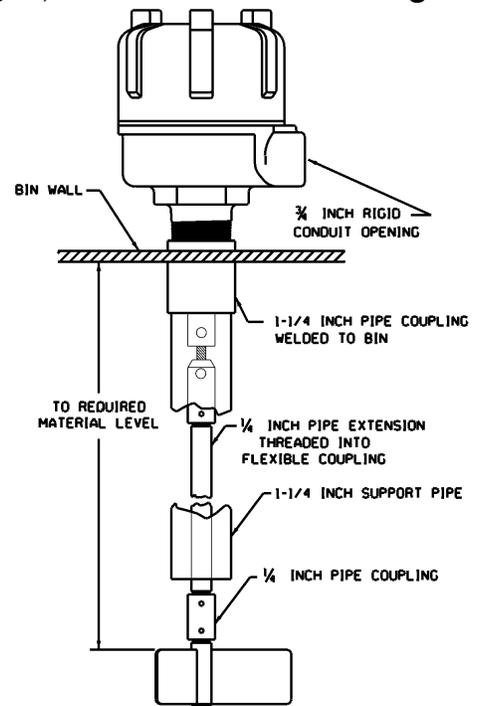

SIDE MOUNT (For mounting plate options see figure 5 on page 6)

Figure 2

1. Locate and cut hole in side of bin to fit outside diameter of 1 1/4" pipe coupling.
2. Weld on half of standard 1 1/4" pipe coupling to bin wall flush with inside of bin.
3. Insert hub into coupling and turn to desired conduit position.
4. Screw paddle into place and replace lock pin.
5. Shaft and paddle should be shielded in low level mounting when subjected to material flow.
6. For side mount, a solid coupler is recommended.

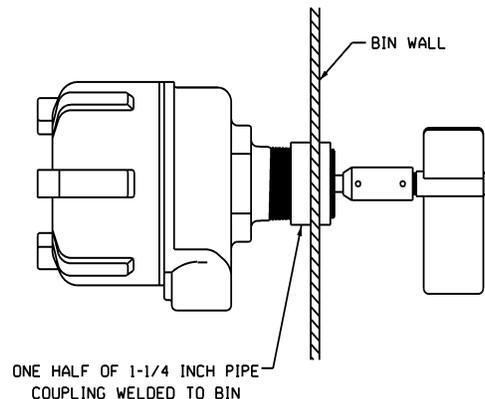

MOUNTING PLATES

Mounting plates are necessary when a completely assembled unit is to be mounted on the bin wall from the outside. A 5 1/2" hole is cut in the bin. Six bolt holes are drilled around the hole to match the mounting plate. The plate, with the unit attached, is then bolted in place. All mounting plates are available in carbon and stainless steel.

Full Coupling

For use with all Rotary level controls. This model is used for top of bin installations where shaft extensions and shaft guards are required.

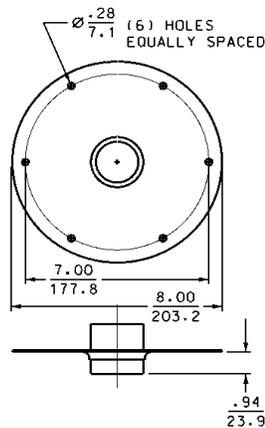


Figure 4

Half Coupling

For use with all Rotary level controls. This model is used primarily for side of bin installations.

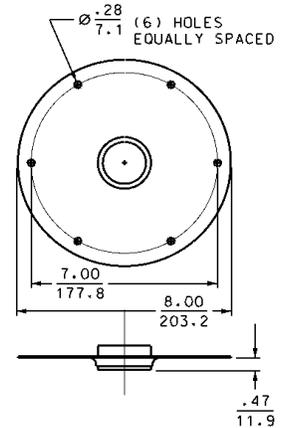


Figure 5

2.2 Input Power and Field Wiring



The MAXIMA+ is available in an AC Model and a DC Model. See the voltage rating on the nameplate for the appropriate supply voltage. The AC Model can be powered from either a 24VAC, 115 VAC, or 230 VAC supply (see diagram below). **The Voltage selector switch must be put in the correct voltage position for the power supplied to the LINE input terminals N and L.** Field wiring should conform to all national and local electrical codes and any other agency or authority having jurisdiction over the installation. For power input, use wire that is sized and rated for the maximum voltage and current as per equipment ratings and has a temperature rating of at least 90°C and suitable for 25°C above surrounding the ambient temperature. For relay output, use wire that is sized and rated for the maximum voltage and current as per application, up to 250VAC 10A, and has a temperature rating of at least 90°C and suitable for 25°C above surrounding the ambient temperature. Installation shall be done by qualified personnel.

AC Maxima+ Wiring


Figure 6

115 or 230 VAC Input Power

1. Confirm that the voltage Selector switch is in the correct position for the voltage applied.
2. The LINE INPUT is connected to terminals L1 and L2/N when the input voltage is either 115 VAC or 230 VAC.
3. If your circuit has a neutral conductor, connect it to the L2/N terminal. Connect the Hot conductor to the L1 terminal.
4. External Overcurrent Protection: 115 VAC = 200 mA
230 VAC = 100 mA

24 VAC Input Power

1. The 24 VAC terminals are used when the Input voltage is 24 VAC.
2. When powered from a 24 VAC system. **neither conductor can be grounded.**
3. External Overcurrent Protection 24 VAC = 750 mA

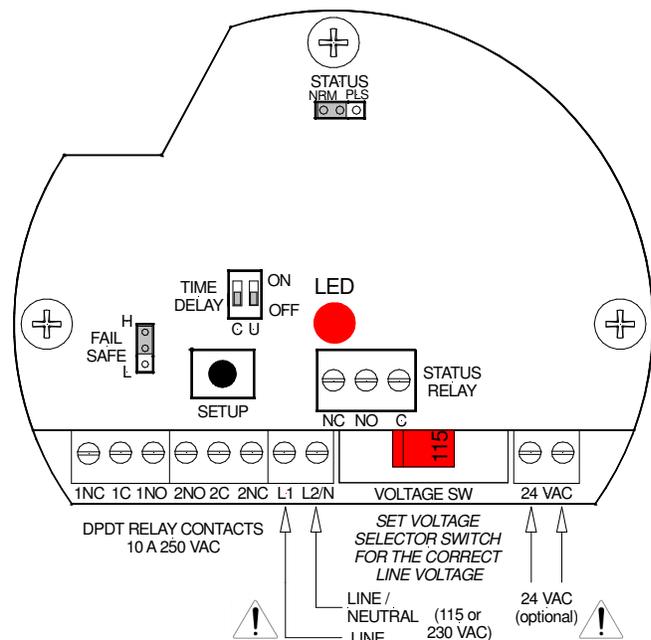


DC Maxima+ Wiring

Figure 7

DC Maxima+ units are available in a 12 to 24 VDC model.



1. Confirm that the DC Maxima+ unit is rated for the DC voltage that is used.
2. Refer the drawing to the right for correct terminal location.
3. The positive (+) conductor of the power input is connected to the (+) terminal of the DC INPUT.
4. The negative (-) conductor of the input power is connected to the (-) terminal of the DC INPUT.

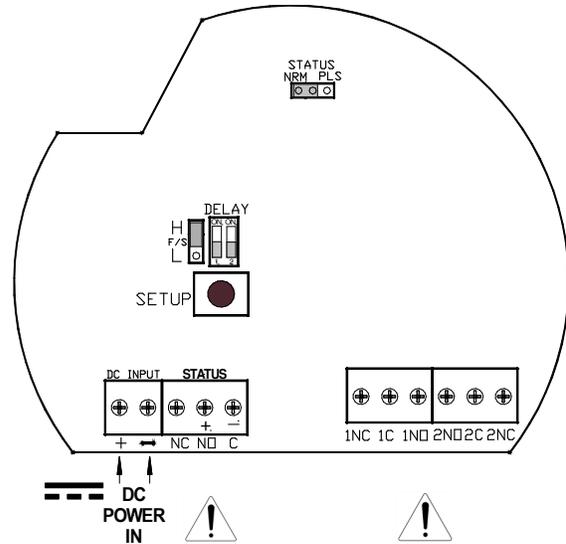

2.3 Grounding



An equipment grounding connection (earth ground) must be supplied to the unit for safety. Connect the ground conductor to the green equipment grounding screw identified in the enclosure.

3.0 RELAYS



The Maxima+ has two different relays, a DPDT relay and a STATUS relay. The DPDT relay is used for covered and uncovered indication. The Status relay is used for monitoring the status of the Maxima+ unit. The DPDT relay outputs may be connected to different phases, only for voltages up to 125VAC. For voltages above 125VAC, the relays shall be connected to the same phase circuit only.


3.1 DPDT Relay

The DPDT relay utilizes a Fail Safe selection jumper F/S. There are 2 positions for this jumper High (H) and Low (L). A Fail-Safe condition means that the DPDT relay contact positions are set up so that in the event of a fault condition or a power failure the relay will be de-energized and the contacts will indicate a condition that is deemed safe for the application.

3.2 Fail-Safe High

Fail-Safe High means that the relay will be energized when the paddle is rotating (uncovered) and will de-energize when the paddle is covered. In this mode, a fault condition or a power failure will cause the relay contacts to indicate that the paddle is covered, whether it is or not.


Figure 8

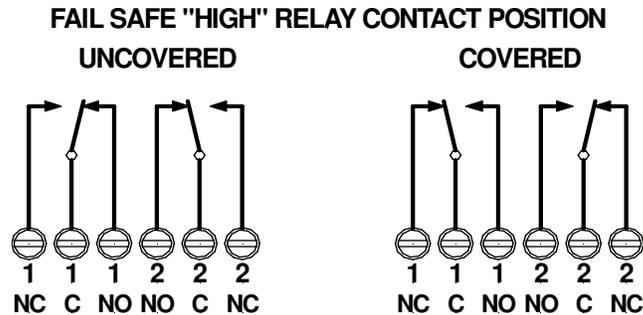

3.3 Fail-Safe Low

Fail-Safe Low means that the relay will be de-energized when the paddle is rotating (uncovered) and will energize when the paddle is covered. In this mode, a fault condition or a power failure will cause the relay contacts to indicate that the paddle is uncovered whether it is or not.

Figure 9

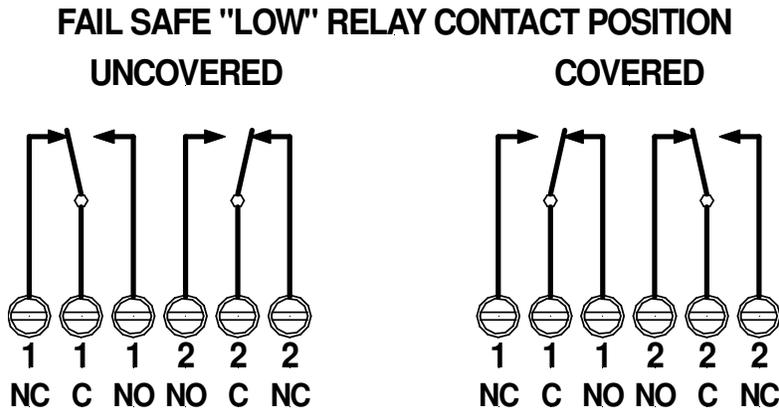


3.4 Status Relay

The Status relay indicates the status of the Maxima+. There are two modes of operation for the Status Relay, Normal (NRM) and Pulse (PLS). The mode for the Status relay is selected by the STATUS jumper at the top of the circuit board (see Figure 10).

In the NORMAL (NRM) position, the STATUS relay is energized when the Maxima+ is operating correctly. In this mode the shaft rotation is monitored. If the shaft is not rotating then the "covered" switch is monitored to see if there is a covered condition. If the shaft is not rotating and the "covered switch" is not indicating covered, then the Maxima will go into a Fault condition. A Fault condition is indicated by both the STATUS relay and the DPDT de-energizing and the visual LED going off.

Figure 10

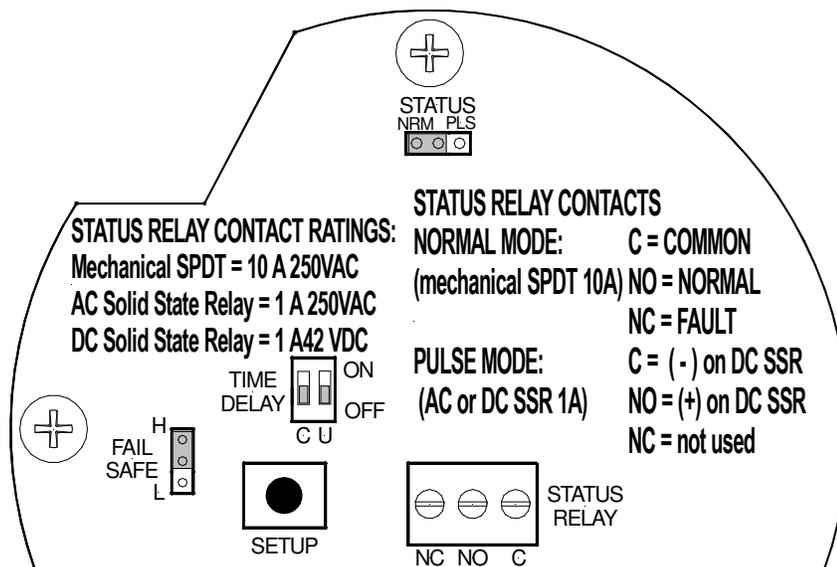

In NRM mode, the Status relay will have a connection between the C and the NO terminal. In a Fault condition there will be a connection between the C and NC terminals when using the standard SPDT relay. The Solid State relays are SPST, they do not use the NC terminal. In Normal mode with either of the Solid State relay options, there will be a connection between the C and NO terminal when the Maxima+ is operating normal. During a Fault condition there will be no connection between the C and NO terminal.

In the Pulse (PLS) mode it is recommended to have one of the Solid State Relay options. In Pulse Mode (PLS) the STATUS relay will be energized during a covered condition and there will be a connection between the C and NO terminals. When the paddle is rotating (uncovered) the STATUS relay will be pulsing ON and OFF like the visual LED. During a Fault condition the STATUS relay will de-energize.

4.0 TIME DELAY

The Maxima+ has selectable time delay for the DPDT relay contacts. This time delay can be selected for switching from an uncovered to a covered condition or it can be selected for switching between a covered to and uncovered condition or both. The time delay is selected by the two time delay DIP switches. Switch 1 is for selecting a time delay for going from an uncovered to a covered condition. Switch 2 is for selecting a time delay for going from a covered to an uncovered condition. When the switch is OFF there is no time delay. When the switch is ON there will be a time delay for that condition.

By default the time delay is set to 5 seconds for both switches. This time delay can be changed by using the SETUP push button switch on the circuit board. (Refer to Figure 10). The Delay Time can be set for each switch independently or for both together if the same delay time is desired for both "delay on covered" and "delay on uncovered". The maximum time delay that can be programmed is 25 seconds. Follow the procedure in 4.1 to change the delay time.

4.1 Changing Delay Time

Step 1. Select the switch for the delay time that you want to change by placing it in the ON position. Switch 1 is for "Delay on Covered". Switch 2 is for "Delay on Uncovered". The new delay time will be set for switch or switches in the ON position. At least one of the delay switches must be ON in order to enter the programming mode.

Step 2. Press and hold the SETUP switch (refer to Figure 10) for three seconds to initiate the programming mode. The LED will flash for these three seconds at a fast rate to indicate entry of the program mode. Releasing the SETUP switch during this initial 3 second period will abort the program mode and leave the delay times unchanged.

Step 3. After the three seconds has passed, continue holding the SETUP switch for the desired amount of delay time in seconds. The LED stops flashing and will blink every second to give you indication of the delay time so far. Each one second flash is one second of delay time.

Step 4. After the desired amount of delay has passed, let go of the SETUP switch and the delay time will be set for the delay switches that are in the ON position. You may enter up to 25 seconds. Holding the SETUP switch longer than this will have no effect and limit the delay to 25 seconds.

5.0 EXTERNAL LED

Maxima+ models include an external view LED. This LED provides an externally visible status indication for the Maxima+. When this LED is flashing, it indicates a normal **Uncovered** condition. When this LED is ON steady, it indicates a **Covered** condition. When this LED is OFF, it indicates a power failure or fault condition.

6.0 WARRANTY AND CUSTOMER SERVICE

6.1 Limited Warranty

BinMaster warrants this product against defects in material and workmanship for two (2) years according to the following terms:

- 1.) This warranty extends to the original purchaser only and commences on the date of original purchase.
- 2.) BinMaster's sole obligation under said warranty is to repair, or at its option replace the defective parts. The buyer shall have no other remedy. All special, incidental and consequential damages are excluded. The buyer must deliver the product under warranty prepaid to the factory. BinMaster's obligation is limited to the cost of material and labor to repair or replace, and does not include transportation expenses.
- 3.) This warranty shall be voided, in our sole judgement, by alterations of equipment except by BinMaster, or tampering with, improper installation or maintenance, accident or misuse, or act of God. This warranty expressly excludes all damage to the product resulting from careless or neglectful packaging or transportation. This warranty does not extend to repairs made necessary by normal wear.
- 4.) This warranty is in lieu of all other warranties, expressed or implied including any implied warranties or merchantability or fitness for particular purpose. No employee, agent franchise dealer or other person is authorized to give any warranties of nature on behalf of BinMaster.
- 5.) BinMaster shall in no event be responsible for any warranty work done without first obtaining BinMaster's written consent.
- 6.) Except as provided herein, BinMaster shall have no liability, loss or damage caused or alleged to be caused directly or indirectly by this equipment.
- 7.) This warranty gives the buyer specific legal rights, and you may also have other rights which vary from state to state.
- 8.) For service, please call 402 434 9102.

6.2 Customer Service

BinMaster offers a toll-free Customer Service phone number **1-800-278-4241**. You may call the Customer Service Department for technical, application and service assistance Monday through Friday from 8:00AM to 5:00 PM Central Time. International customers call us at **(402) 434-9102** or

reach us via **fax** at **(402) 434-9133**.

7.0 Disposal

This product consists of materials that can be recycled by specialized recycling companies. It uses recyclable materials and the electronics is designed to be easily separated. Consult local authorities for proper disposal locations.

8.0 Repair

This product contains no user serviceable parts. For repair please consult factory.

EU Declaration of Conformity

BinMaster Level Controls
A Division of Garner Industries
7201 North 98th Street
Lincoln, NE 68507-9741
Phone: 402-434-9100, Fax: 402-434-9133

BinMaster declares under our sole responsibility that all models of the Maxima+ level control devices listed below comply with the following directives and harmonized standards. This product if installed, operated and maintained as described in this manual will provide a safe and reliable point level control device for bulk solid materials.

Product: Rotary point level control device

Models: Maxima+ AC Models 24VAC, 115VAC, and 230VAC; DC Models 12VDC and 24VDC

Manufacturing Location: Lincoln, Nebraska, USA

ATEX Directive 2014/34/EU



II 1/2D c Ex tb IIIC T138°C Db (Ta = -20°C to +85°C)

EU-type examination certificate:

Sira 09ATEX1213X

Notified Body for EU-type examination certificate:

CSA Group 2813 Netherlands BV

Harmonised standards used:


EN 60079-0:2012
EN 60079-31:2014
EN 13463-1:2009
EN 13463-5:2011

All test reports and documentation are held and can be obtained from BinMaster.


A handwritten signature in black ink, appearing to read 'Scott M. Lewis', is written over a horizontal line.

President
9/15/2019

Mounting Instructions

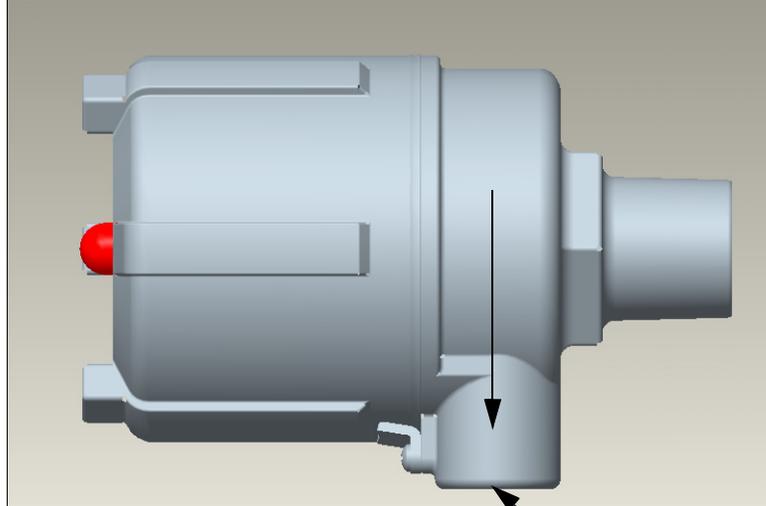

Always Mount Unit With
Conduit opening down

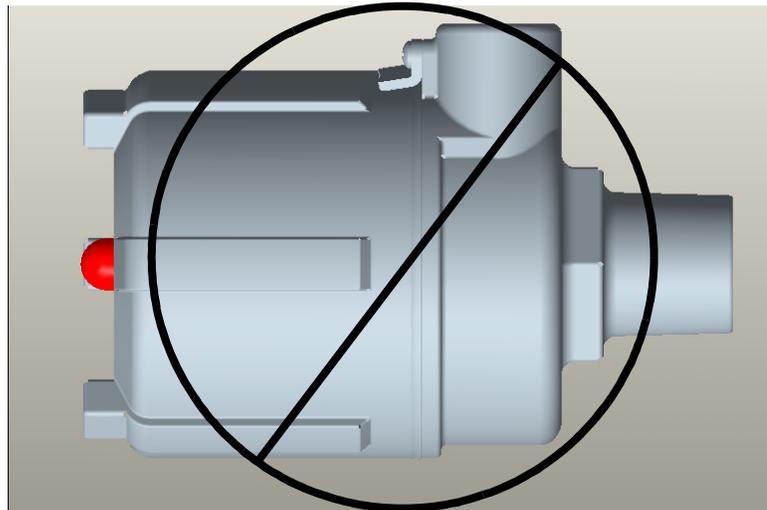

Conduit Seal

For hazardous locations, an appropriate conduit seal off as per the installation class or zone is required within 18" of the enclosure

BINMASTER[®]

Division of Garner Industries
7201 No. 98th Street
Lincoln, NE 68507
(402) 434-9102